

## 2004 Prius 5,000 Miles - 6 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 10,000 Miles - 12 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 15,000 Miles - 18 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the ""fresh"" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 20,000 Miles - 24 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 25,000 Miles - 30 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 30,000 Miles - 36 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>2</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.
- 2) Inspect thickness measurement and disc runout.

## 2004 Prius 35,000 Miles - 42 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 40,000 Miles - 48 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 45,000 Miles - 54 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 50,000 Miles - 60 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 55,000 Miles - 66 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 60,000 Miles - 72 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>2</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts<sup>3</sup>
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Replace differential oil
- Replace transmission fluid
- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.
- 2) Inspect thickness measurement and disc runout.
- 3) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

## 2004 Prius 65,000 Miles - 78 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 70,000 Miles - 84 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 75,000 Miles - 90 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine and inverter coolant
  - \_\_ Exhaust pipes and mountings
  - \_\_ Radiator, condenser and intercooler
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the ""Fresh"" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 80,000 Miles - 96 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 85,000 Miles - 102 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 90,000 Miles - 108 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Brake linings/drums and brake pads/discs<sup>2</sup>
  - \_\_ Differential oil
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine and inverter coolant
  - \_\_ Exhaust pipes and mountings
  - \_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_ Fuel tank cap gasket
  - \_\_ Radiator, condenser and intercooler
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots
  - \_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.
- 2) Inspect thickness measurement and disc runout.

## 2004 Prius 95,000 Miles - 114 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 100,000 Miles - 120 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace engine and inverter coolant<sup>2</sup>
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.
- 2) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine and Inverter Coolant) for details.

## 2004 Prius 105,000 Miles - 126 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine and inverter coolant
  - \_\_ Exhaust pipes and mountings
  - \_\_ Radiator, condenser and intercooler
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the ""Fresh"" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 110,000 Miles - 132 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 115,000 Miles - 138 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.

## 2004 Prius 120,000 Miles - 144 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Replace spark plugs<sup>2</sup>
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Brake linings/drums and brake pads/discs<sup>3</sup>
  - \_\_ Differential oil
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine and inverter coolant
  - \_\_ Engine valve clearance
  - \_\_ Exhaust pipes and mountings
  - \_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_ Fuel tank cap gasket
  - \_\_ Radiator, condenser and intercooler
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots
  - \_\_ Transmission fluid or oil

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace differential oil
- q Replace transmission fluid
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder light ("MAINT REQD") or the message "OIL MAINTENANCE REQUIRED" on the multi-information display after engine oil replacement.
- 2) Required under the terms of the Emission Control Warranty. Does not apply to PZEV Prius in California, New York, Massachusetts, Maine and Vermont. For this model, replacement interval is 150,000 miles.
- 3) Inspect thickness measurement and disc runout.