

## 2006 Prius 90,000 Miles - 108 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 4) Inspect thickness measurement and disc runout.